


## How to pitch your Tent



Step 1	Step 2	Step 3
Choose your Tent Deck	Clean the Deck with the Outdoor Broom	Choose your tent

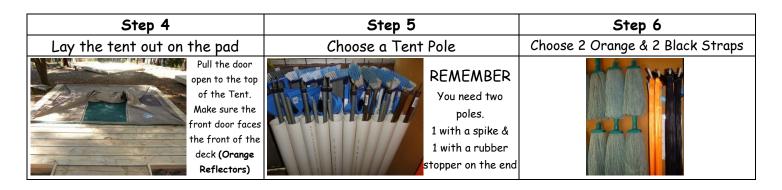

Step 7	Step 8		Step 9	
Prepare everything on the Pad	Orange Straps go to t	he front	Black straps go to t	the back
		Orange Reflectors		Blue Reflectors

Step 10	Step 11	Step 12
Thread all 4 Straps	Gently Tighten all 4 Straps	Assemble the Tent Pole
Tent Loops  Pad Eye Bolt	DO NOT over tighten the straps	REMEMBER The tent pole is spring loaded.  DO NOT tighten the pole.

Step 13	Step 14	Step 15
Lift up the Tent Roof Frame	Find the Tent Pole Roof Outlet	Place pole into the Roof Outlet



## How to pitch your Tent



Step 16 Step 17 Prepare to pitch your Tent Lift the Tent Pole The Tent is heavy. You may need a



Step 19





Step 18



friend to help you.



If your tent pole is missing the tightening bolt, do not worry - move on to Step 20

Step 20	Step 21	Step 22
Fully zip up your Tent	Gently Tighten all 4 Straps	Open the Tent doors
	DO NOT over tighten the straps	

CONGRATULATIONS	Step 23	Step 24
You have pitched your Tent	Choose your Mattress	Choose your Pillow & Blanket



